


ASSEMBLY INSTRUCTIONS

SINGLE PANEL BATH SCREEN RADIUS EDGE

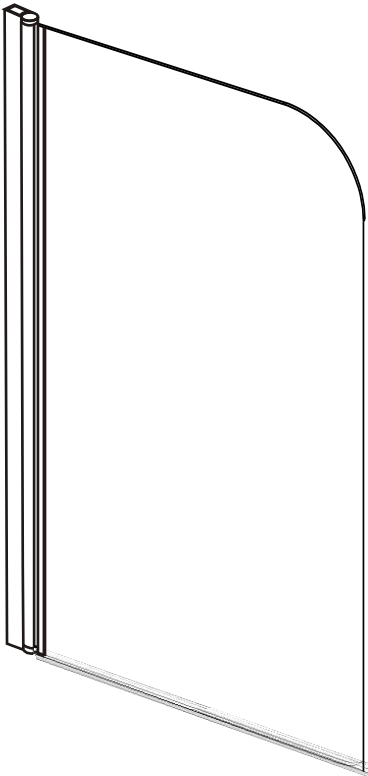











General Information

Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. **TAKE CARE WHEN HANDLING GLASS PARTS - AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE.** Glass breakage claims will not be accepted after the product has been unpacked.

Aftercare instructions


Regularly clean your shower product with warm soapy water to prevent lime scale build up. **DO NOT** use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.

Tools Required

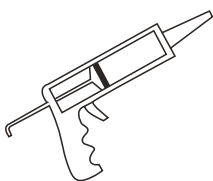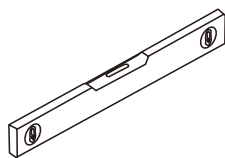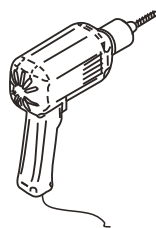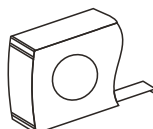

This product is heavy and may require two people to install.

ASSEMBLY INSTRUCTIONS-DRAWING

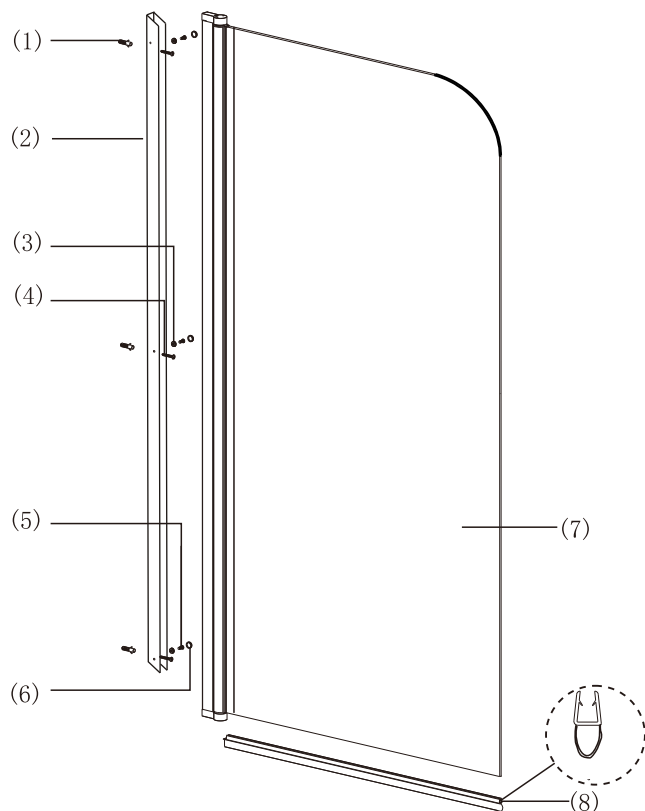


- (1) 3x Wall Plugs
- (2) 1x Wall Post
- (3) 3x Cover Cap Clips
- (4) 3x Screws M4X30
- (5) 3x Screws M4X12
- (6) 3x Cover Caps
- (7) 1x Glass Screen
- (8) 1x Bottom Seal

ASSEMBLY INSTRUCTIONS


If you require help, we advise you firstly contact a competent plumber

Installation Steps (left-handed installation)


Step 1

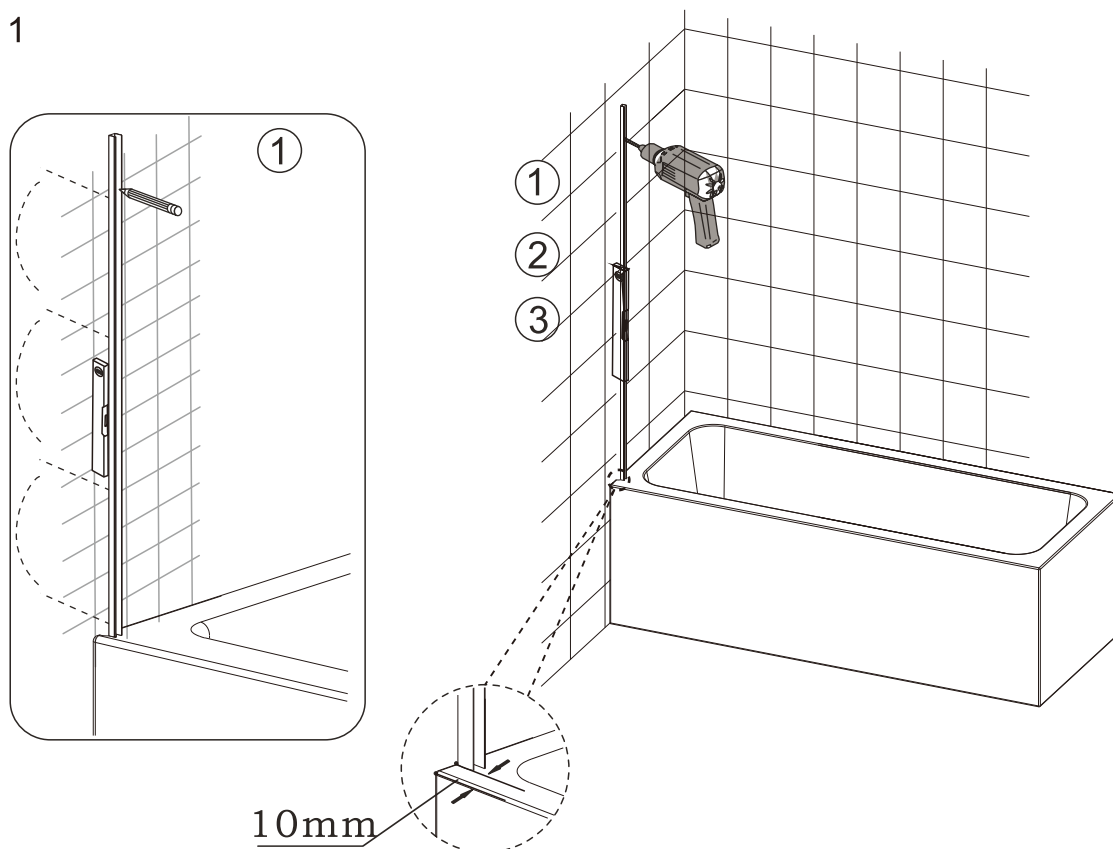


ASSEMBLY INSTRUCTIONS

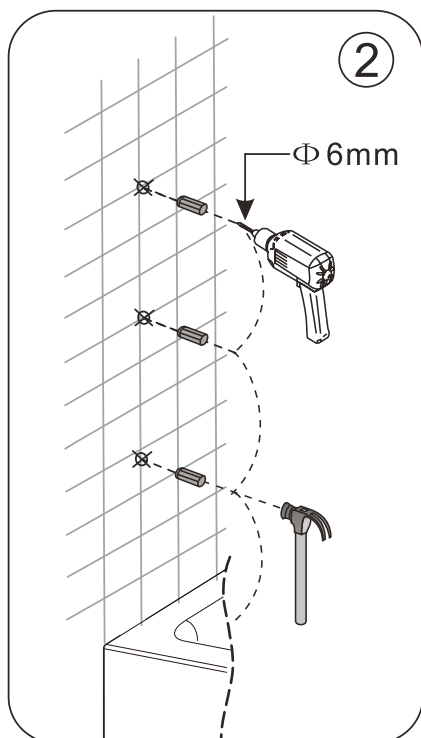

Take Care Not To
Damage Wall Surface

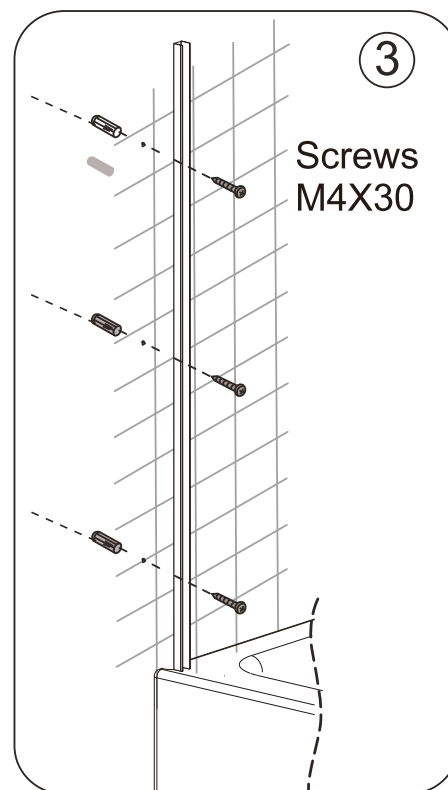


Step 2

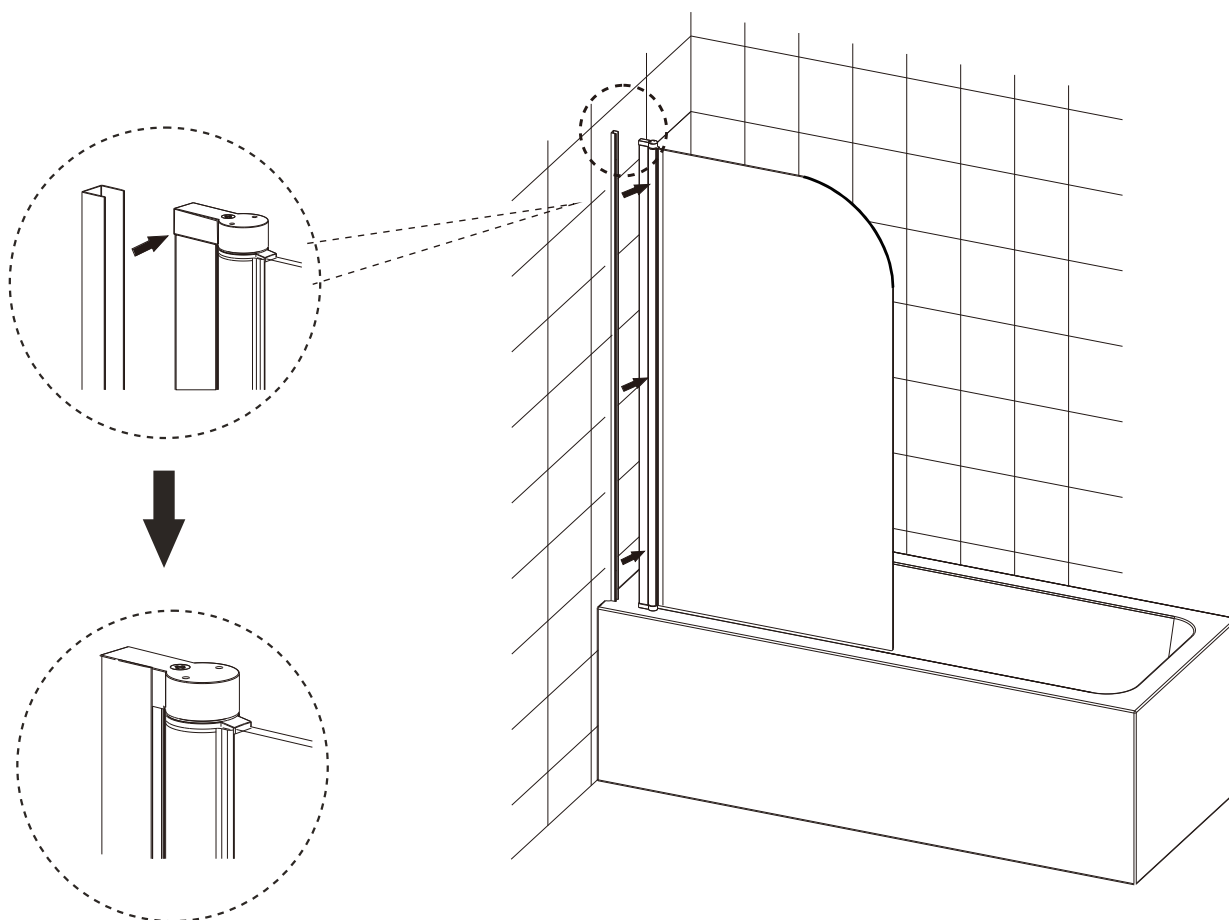


NOTE: To ensure the screen is parallel to the bath hold the top of the hinge and move the whole screen back or forwards to adjust before carrying out step 3.

Step 3


The holes should be drilled exactly 15mm from the wall

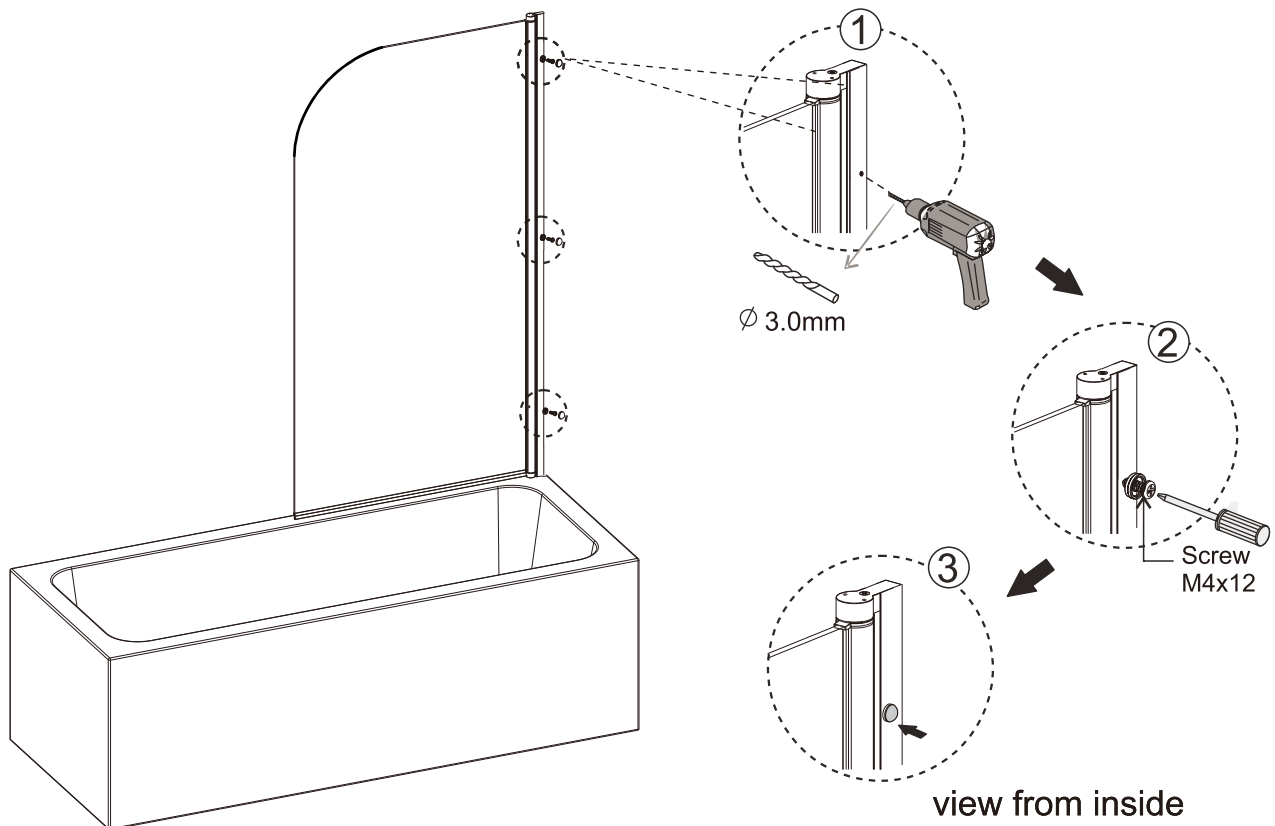

Step 4

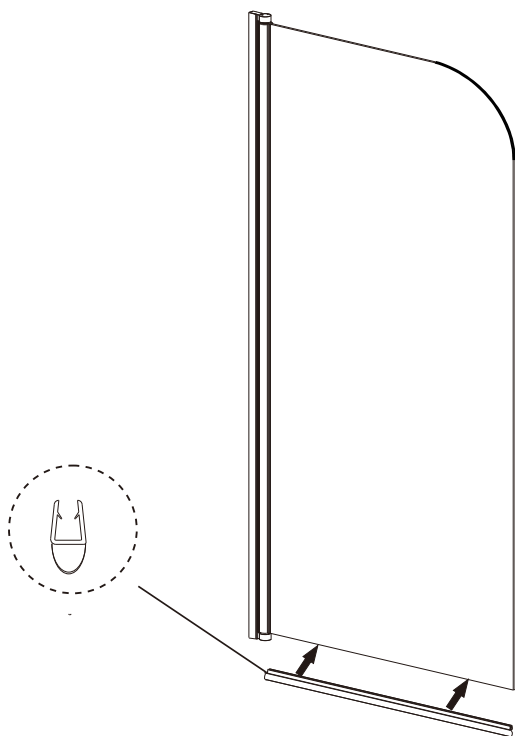

Step 5

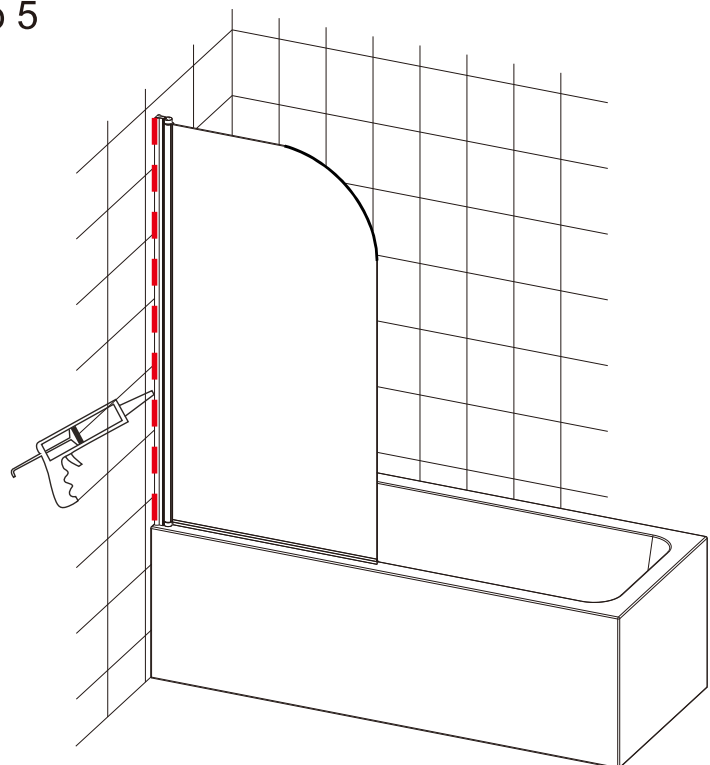



Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only

ASSEMBLY INSTRUCTIONS

Installation Steps (right-handed installation)

Step 1

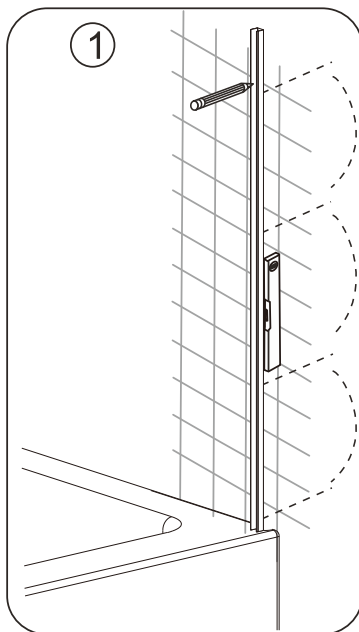
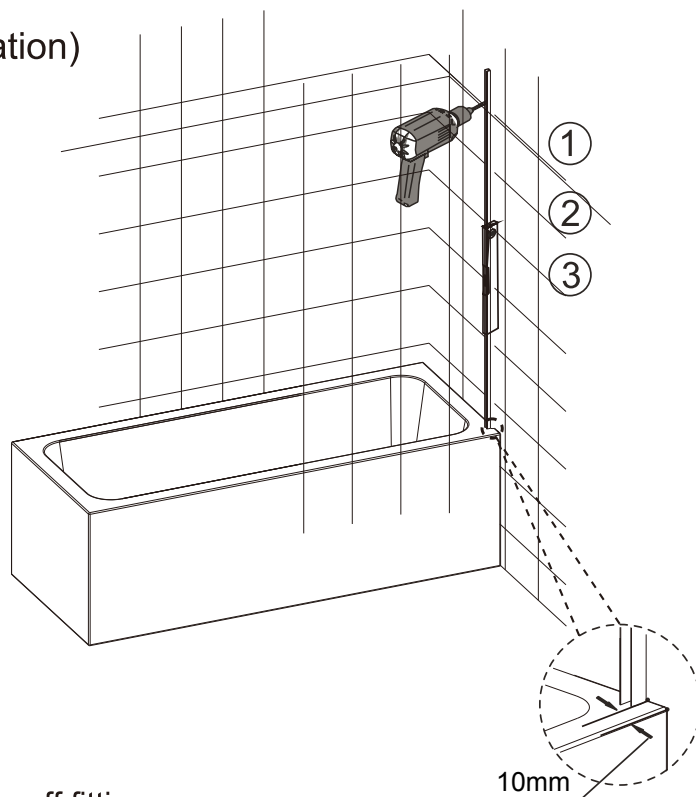


Step 2

Loosen the screw of one end fitting and then take off fitting.

Turn around the profile with another fitting to swap top and bottom fittings.

Screw back the loosen fitting.

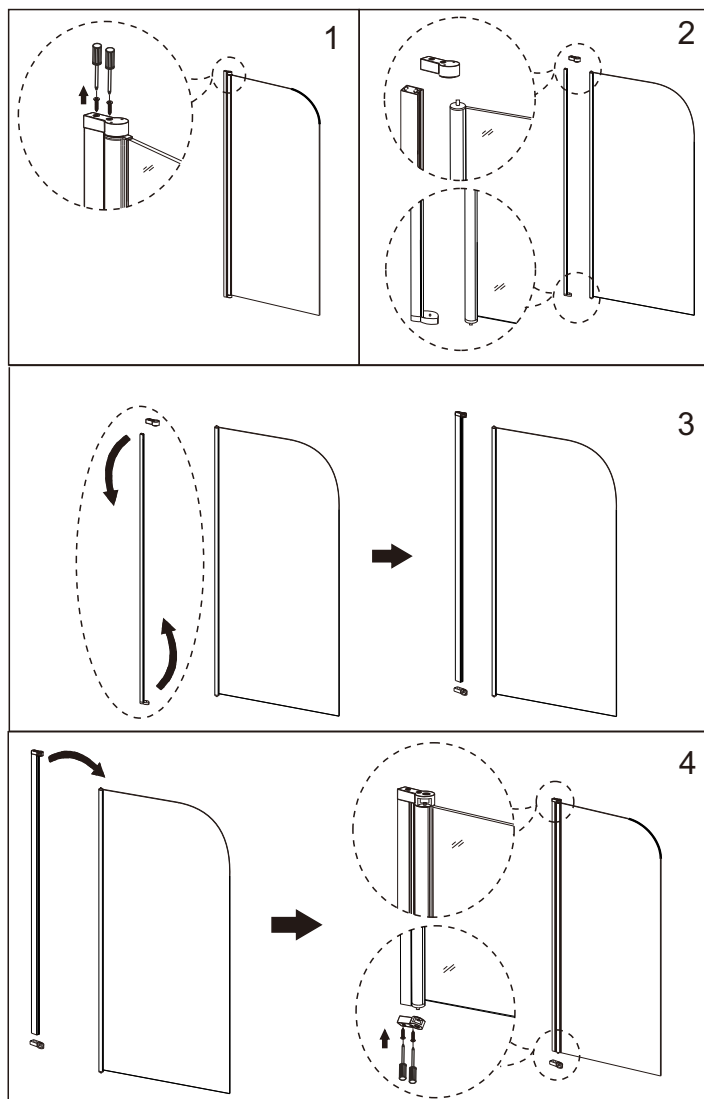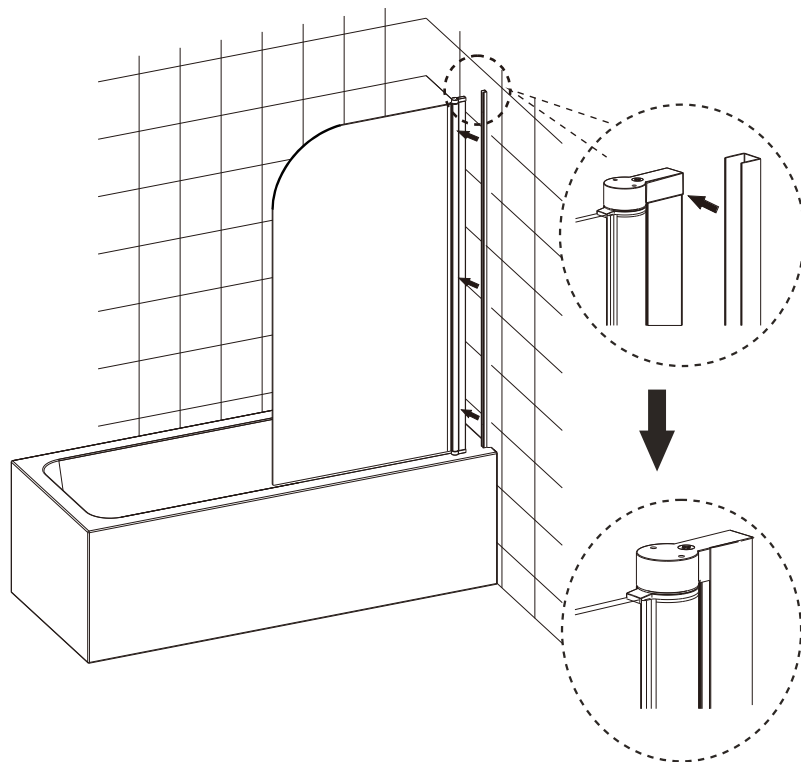


Please make sure the fitting's gap appear to inside


NOTE: To ensure the screen is parallel to the bath hold the top of the hinge and move the whole screen back or forwards to adjust before carrying out step 3.

Step 3


The holes should be drilled exactly 15mm from the wall

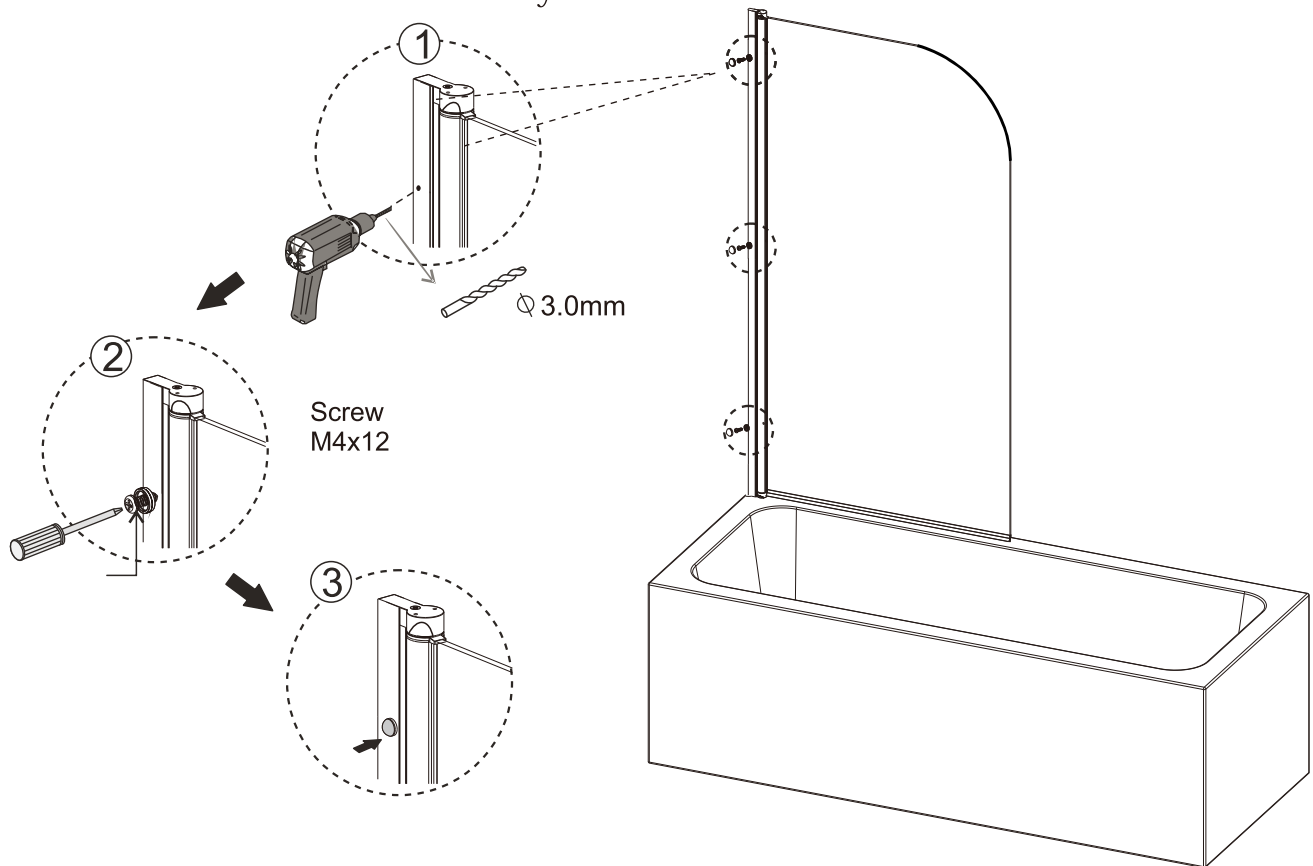

Step 4

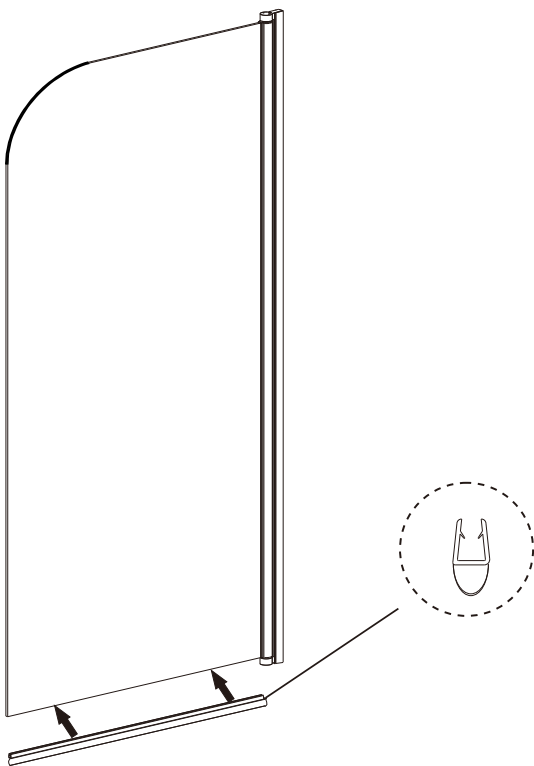

Step 5

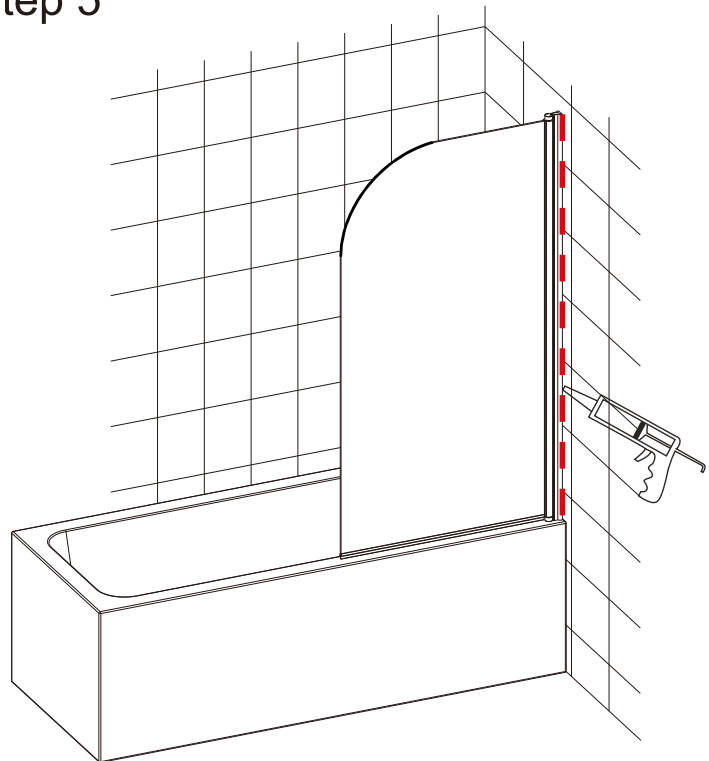

Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only